



AirChek²⁰⁰⁰

Quick Guide >>

Operation >>

Star Button *

Scrolls through run time data, display options, and sampling parameters during pump setup

Up and Down Arrow Buttons ▲▼

Increase or decrease sampling parameters and toggle between display choices in setup

Button Sequence

▼ * = press buttons individually

[▲▼] = press simultaneously when bracketed

▲▼ = security code, always press in sequence

Security Code *▲▼*

Must be pressed within 10 seconds of previous command

Mode Change

Press [▲▼] to toggle between Run and Hold.

Pump Activation

Press any button.

Pump Setup Options >>

User Interface Level One - Set Up Flow Rate

*To enter flow rate setup, pump must be in Hold. Press [▲▼] to Run pump and press *▲▼* within 10 seconds.*

• **Change and calibrate flow rate:**

Flow rate and SET flash. Press ▲ or ▼ to change flow rate. Press * when finished; ADJ displays and flashes. Press ▲ or ▼ to adjust the flow until pump and calibrator agree. When finished, press * until End displays. Press [▲▼] to save new setting.

Pump Setup Options (cont.) >>

User Interface Level Two - Set Up Sampling and Display

*To enter sampling and display setup, pump must be in Run. Press [▲▼] to Hold pump and press *▲▼* within 10 seconds. Select from the following options:*

- **Clear accumulated data:**
Press * until CLr displays and then press [▲▼]. Press * until End displays and then press [▲▼].
- **Change temperature scale (F/C):**
Press * until temperature displays. Press ▲ or ▼ to switch units. Press * until End displays and then press [▲▼] to save new setting.
- **Change atmospheric pressure scale (mm Hg/ins Hg/millibars):**
Press * until pressure displays. Press ▲ or ▼ to switch units. Press * until End displays and then press [▲▼] to save new setting.
- **Change time scale (12 Hr/24 Hr):**
Press * until 12 Hr or 24 Hr displays. Press ▲ or ▼ to switch units. Press * until End displays and then press [▲▼] to save new setting.
- **Change time of day:**
Press * until time displays. Press ▲ or ▼ to change flashing hour. Press * to move to minutes and press ▲ or ▼ to change. Press * until End displays and then press [▲▼] to save new setting.
- **Change sample time:**
Press * until SF 00 displays. Press ▲ or ▼ to change flashing digits. Press * until End displays and then press [▲▼] to save new setting.

To exit without saving changes in User Interface Level Two, scroll to Esc and press [▲▼].