

Calibrating your IAQ-MAX Step-by-Step Procedure:

- **Step 1)** Enter the "Settings" menu for the device by pressing the middle power button on the back of the device, 2 times.
- Step 2) Scroll down through the settings by using the power button until you reach "CAL".
- **Step 3)** Press either arrow button to toggle the CAL feature "OFF".
- **Step 4)** Continue scrolling through the complete settings menu. You must scroll through the entire menu for the settings to save.
- **Step 5)** Next, take your IAQ-MAX outside and leave it outside, by itself for 5 minutes.
- **Step 6)** Do not breathe on or near your device as the CO2 from your breath will affect the calibration Stay at least 6 feet away from the device while it calibrates.
- **Step 7)** Hold the device so that the color display is facing **you**. Using your right-hand reach around to the back of the device and find the right-hand arrow button. **You will need to use this button for step #8.**
- **Step 8)** Press and hold the left-hand arrow button (reference diagram on pg. 5), the device will beep twice and the display will read (calibrating 5min). Release the button.
- **Step 9)** Set the device down outside and walk away. **Do not approach the device for at least 5** minutes.
- **Step 10)** When you return after the 5-minute period the device should be calibrated. Depending on the outdoor air quality in your area the device will likely read between 400 450 ppm.

Please Note, Do not place the IAQ-MAX in direct sunlight as this can negatively affect the calibration and operation of the device.



Distributed by: Air-Met Scientific Pty Ltd Air-Met Sales/Service P: 1800 000 774 F: 1800 000 774 E: sales@airmet.com.au

131 BUSINESS CENTER DRIVE

Air-Met Rental P: 1300 137 067 E: hire@airmet.com.au

