

863 Valley View Road, Eighty Four, PA 15330 724-941-9701 skcinc.com

NoiseCHEK Personal Noise Dosimeter Cat. No. 701-001 Series Operating Instructions

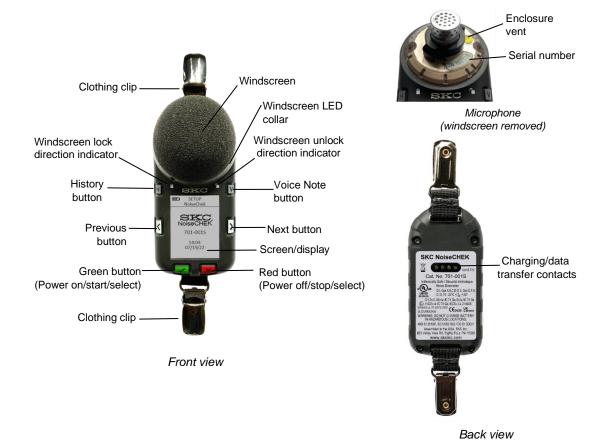


Figure 1. NoiseCHEK Personal Noise Dosimeter — Overview

Table of Contents

Introduction	3
Checking Dosimeter/Kit Contents	3
Getting Started	6
Charging the Battery	6
Notes and Cautions	8
Turning Power On/Off	8
Determining Battery Charge Status	8

Determining Dosimeter Status — LEDs	9
Using the Buttons	9
Interpreting and Navigating Screen Displays	10
Home Screen	10
Info Screen	10
Virtual Dosimeter Screens (Setup and Standby)	10
History Screens	11
Status Icons	11
Changing Time/Date	11
Recording/Playing a Voice Note	11
Voice Note Status	12
Attaching NoiseCHEK on a Worker	13
Removing/Reinstalling Windscreen	13
Operation	14
Performing a Sample Run	14
Calibrate	14
Sample	15
Post-calibrate	16
Lock Feature	17
Reviewing Data (History)	17
Using DataTrac dB Software	18
Install DataTrac dB Software	19
Accessories/Replacement Parts	20
Appendix: Performance Profile	21

INTRODUCTION

The SKC NoiseCHEK Personal Noise Dosimeter (*Figure 1*) measures a worker's daily noise exposure in the workplace as required to meet regulations and standards for compliance. The SKC NoiseCHEK Cat. No. 701-001 Series includes intrinsically safe models and models for use only in non-hazardous locations; Bluetooth® Low Energy (BLE) models feature connectivity to the SmartWave dB mobile app. The series includes the following models:

Cat. No.	
701-001S	Intrinsically safe, BLE
701-001NBS	Intrinsically safe, no BLE capability
701-001	For use only in non-hazardous locations, BLE
701-001NB	For use only in non-hazardous locations, no BLE capability

NoiseCHEK has a ½-inch Class 2 microphone and is worn on the apex of the shoulder with the microphone close to the ear and away from the neck. Clothing clips on each end of the device attach the dosimeter securely to a worker's shoulder.

Program up to four virtual dosimeters in the noise dosimeter for simultaneous compliance and monitoring per OSHA, ACGIH, MSHA, and a User Custom option to meet internal standards that may exceed the exposure requirements of regulations. Settings are enabled/modified using SKC DataTrac® dB Software for NoiseCHEK. See Using DataTrac dB Software.

A note about default settings: NoiseCHEK has been shipped with programmed settings for OSHA compliance and AIHA recommendations listed in the table below.

	Default Settings
Virtual dosimeters/parameters	OSHA Hearing Conservation (HC)
	OSHA Permissible Exposure Limit (PEL)
	ACGIH
Measurement readings for	SPL, TWA, Dose, Lavg, Peak, Lmax, pTWA, pDose, and Upper
sample runs	Limit
Measurement readings shown in	TWA, Dose, Lavg, Peak, Lmax, pDose, and Upper Limit
History	
History sample rate	60 seconds
Voice Note	Enabled
Secure Lock (Cat. Nos. 701-001	Enabled – PIN (default 1 2 3 4) required to connect to SKC
and 701-001S only)	SmartWave dB app. See Lock Feature, Cat. Nos. 701-001 and
-	701-001S.

Checking Dosimeter/Kit Contents

Use the table below to verify that you received all items associated with the Cat. No. ordered. If you are missing items, contact SKC at 800-725-8472 (U.S. only) or 724-941-9701.

If you ordered Cat. No.	Your package should contain
Intrinsically Safe, BLE	
701-001S	Dosimeter only, requires charging dock; see kits below or Accessories/Replacement
	Parts
701-001KS	Single Kit includes dosimeter, 1-unit Charging Dock with power supply, USB cable,
	and USB drive with instruction manual, in a protective carry case
701-001KS-C	Single Kit with Class 2 Calibrator includes dosimeter, 1-unit Charging Dock with
	power supply, AcoustiCHEK Calibrator, USB cable, and USB drive with instruction
	manual, in a protective carry case

If you ordered Cat. No.	Your package should contain
701-001K3S	3-pack Kit includes 3 dosimeters and 1 each: 5-unit Charging Dock with power
	supply, AcoustiCHEK Calibrator, replacement windscreen, USB cable, and USB drive
	with instruction manual, in a protective charging carry case
701-001K3S-C	3-pack Kit with Class 2 Calibrator includes 3 dosimeters and 1 each: 5-unit
	Charging Dock with power supply, AcoustiCHEK Calibrator, replacement windscreen,
	USB cable, and USB drive with instruction manual, in a protective charging carry case
701-001K5S	5-pack Kit includes 5 dosimeters and 1 each: 5-unit Charging Dock with power
	supply, replacement windscreen, USB cable, and USB drive with instruction manual,
704 0041/50 0	in a protective charging carry case
701-001K5S-C	5-pack Kit with Class 2 Calibrator includes 5 dosimeters and 1 each: 5-unit
	Charging Dock with power supply, AcoustiCHEK Calibrator, replacement windscreen,
Intrinsically Safe, No BLI	USB cable, and USB drive with manual, in a protective charging carry case
701-001NBS	Dosimeter only, requires charging dock; see kits below or Accessories/Replacement
701-001NB3	Parts
701-001KNBS	Single Kit includes dosimeter, 1-unit Charging Dock with power supply, USB cable,
701-001KNB3	and USB drive with instruction manual, in a protective carry case
701-001KNBS-C	Single Kit with Class 2 Calibrator includes dosimeter, 1-unit Charging Dock with
	power supply, AcoustiCHEK Calibrator, USB cable, and USB drive with instruction
	manual, in a protective carry case
701-001K3NBS	3-pack Kit includes 3 dosimeters and 1 each: 5-unit Charging Dock with power
	supply, replacement windscreen, USB cable, and USB drive with instruction manual,
	in a protective charging carry case
701-001K3NBS-C	3-pack Kit with Class 2 Calibrator includes 3 dosimeters and 1 each: 5-unit
	Charging Dock with power supply, AcoustiCHEK Calibrator, replacement windscreen,
	USB cable, and USB drive with instruction manual, in a protective charging carry case
701-001K5NBS	5-pack Kit includes 5 dosimeters and 1 each: 5-unit Charging Dock with power
	supply, replacement windscreen, USB cable, and USB drive with instruction manual,
	in a protective charging carry case
701-001K5NBS-C	5-pack Kit with Class 2 Calibrator includes 5 dosimeters and 1 each: 5-unit
	Charging Dock with power supply, AcoustiCHEK Calibrator, replacement windscreen,
For Use Only in Non-haz	USB cable, and USB drive with instruction manual, in a protective charging carry case
701-001	Dosimeter only, requires charging dock; see kits below or Accessories/Replacement
701 001	Parts
701-001K	Single Kit includes dosimeter, 1-unit Charging Dock with power supply, USB cable,
	and USB drive with instruction manual, in a protective carry case
701-001K-C	Single Kit with Class 2 Calibrator includes dosimeter, 1-unit Charging Dock with
	power supply, AcoustiCHEK Calibrator, USB cable, and USB drive with instruction
	manual, in a protective carry case
701-001K3	3-pack Kit includes 3 dosimeters and 1 each: 5-unit Charging Dock with power
	supply, AcoustiCHEK Calibrator, replacement windscreen, USB cable, and USB drive
	with instruction manual, in a protective charging carry case
701-001K3-C	3-pack Kit with Class 2 Calibrator includes 3 dosimeters and 1 each: 5-unit
	Charging Dock with power supply, AcoustiCHEK Calibrator, replacement windscreen,
701-001K5	USB cable, and USB drive with instruction manual, in a protective charging carry case
נאוטט-וטז	5-pack Kit includes 5 dosimeters and 1 each: 5-unit Charging Dock with power supply, replacement windscreen, USB cable, and USB drive with instruction manual,
	in a protective charging carry case
701-001K5-C	5-pack Kit with Class 2 Calibrator includes 5 dosimeters and 1 each: 5-unit
	Charging Dock with power supply, AcoustiCHEK Calibrator, replacement windscreen,
	USB cable, and USB drive with manual, in a protective charging carry case
For Use Only in Non-haz	ardous Locations, No BLE
701-001NB	Dosimeter only, requires charging dock; see kits below or Accessories/Replacement
	Parts
701-001KNB	Single Kit includes dosimeter, 1-unit Charging Dock with power supply, USB cable,
	and USB drive with instruction manual, in a protective carry case
701-001KNB-C	Single Kit with Class 2 Calibrator includes dosimeter, 1-unit Charging Dock with
	power supply, AcoustiCHEK Calibrator, USB cable, and USB drive with instruction
	manual, in a protective carry case

If you ordered Cat. No.	Your package should contain
701-001K3NB	3-pack Kit includes 3 dosimeters and 1 each: 5-unit Charging Dock with power
	supply, replacement windscreen, USB cable, and USB drive with instruction manual,
	in a protective charging carry case
701-001K3NB-C	3-pack Kit with Class 2 Calibrator includes 3 dosimeters and 1 each: 5-unit
	Charging Dock with power supply, AcoustiCHEK Calibrator, replacement windscreen,
	USB cable, and USB drive with instruction manual, in a protective charging carry case
701-001K5NB	5-pack Kit includes 5 dosimeters and 1 each: 5-unit Charging Dock with power
	supply, replacement windscreen, USB cable, and USB drive with instruction manual,
	in a protective charging carry case
701-001K5NB-C	5-pack Kit with Class 2 Calibrator includes 5 dosimeters and 1 each: 5-unit
	Charging Dock with power supply, AcoustiCHEK Calibrator, replacement windscreen,
	USB cable, and USB drive with instruction manual, in a protective charging carry case

GETTING STARTED

• Do not apply stickers to the back of the dosimeter because this can cause connectivity issues while the dosimeter is in the charging dock.

Charging the Battery

Set up the charging train (Figure 2a or 2b as applicable) and completely charge the battery before operating the dosimeter. See Determining Battery Charge Status. **Note**: All 3-pack and 5-pack kits, including those with calibrator, feature a carry case with charging cable installed to charge dosimeters inside the case. See Charging Train in Carry Case with Charging Cable Installed and Figure 2b.

- 1. Prepare the charging dock (1-unit Charging Dock Cat. No. 701-002 or 5-unit Charging Dock Cat. No. 701-003). See Figure 2a.
 - a. Insert the power supply into the power jack on the back of the charging dock.
 - b. Plug power supply cube into 100-240 V power supply. The power LED on the back of the dock will light up blue when connected to the power supply. **Note**: You can also charge NoiseCHEK by connecting the charging dock to your PC or a USB battery bank with a USB cable. Charging time may increase significantly depending on the power available from the USB port used.
- Place the NoiseCHEK in the prepared charging dock. Battery charging status
 bars will be displayed on the dosimeter screen (see right); five amber LEDs will
 blink during charging. Full charge is indicated by five green blinking LEDs.

 Note: When the battery is fully charged, LCD (display) will shut down. The green
 LEDs will continue blinking while the dosimeter remains in the charging dock.

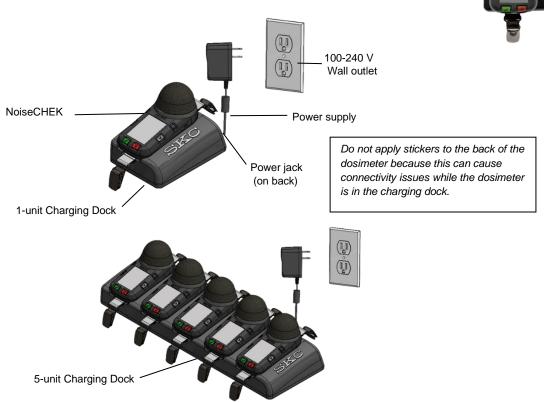


Figure 2a. Charging Train

Charging Train in Carry Case with Charging Cable Installed

• Do not apply stickers to the back of the dosimeter because this can cause connectivity issues while the dosimeter is in the charging dock.

The carry case for all 3-pack and 5-pack kits, including those with calibrator, has a charging cable installed and a power jack for connection to the charging dock and power supply for charging in the case. See Figure 2b.

- 1. Prepare 5-unit Charging Dock Cat. No. 701-003.
 - a. Insert the built-in charging cable into the power jack on the back of the charging dock.
 - b. Plug power supply into the power jack on the side of the case; plug the power supply cube into a 100-240 V power supply. The power LED on the back of the dock will light up blue when connected to the power supply.



Figure 2b. Charging Train in Carry Case with Charging Cable Installed

Place the dosimeters in the prepared charging dock. Battery charging status bars will be
displayed on the dosimeter screens; five amber LEDs will blink during charging. Full charge is
indicated by five green blinking LEDs. Note: When batteries are fully charged, the LCDs
(displays) will shut down. The green LEDs will continue blinking while the dosimeters remain in
the charging dock.

Note: Do not keep dosimeters in charging dock during transport.

Notes and Cautions

- The battery used in this device may present a risk of fire or explosion when heated above 212 F (100 C) or incinerated. Battery can be replaced only by SKC authorized service center.
- When transporting dosimeters, ensure that they are placed in their designated areas inside the case, not on the charging dock.
- Do not apply stickers to the back of the dosimeter because this can cause connectivity issues while the dosimeter is in the charging dock.

Turning Power On/Off

Turn on: Press and hold the green button (*Figure 1*). The Home (Setup) screen will be displayed (*see below left*).

Turn off: From the Home or any virtual dosimeter Setup or Standby screen, press and hold the red button (*Figure 1*). Select YES (press green button) to confirm shutdown (see below right). **Note**: After 5 minutes of inactivity, NoiseCHEK will shut down automatically.





Determining Battery Charge Status

The battery status icon is always displayed at the top left on the screen. See the table below to determine the battery charge.

Battery Status Icon	Battery Charge
IIII)	Full charge, approximately 75 to 100% One to three bars will be displayed when charge is less than full but not low battery.
	Approximately 50 to 75%
	Approximately 25 to 50%
	Approximately 5 to 25%
	Low battery — shutdown is imminent. Note: All data will be stored in History.

Determining Dosimeter Status — LEDs

LEDs (visible through the windscreen LED collar) indicate charging and operation status and activity; exposure level; and, for applicable models, BLE connection. See the table below.

LED Description/Activity	Status
Amber, flashing continuously (device seated in	Not fully charged
charging dock)	
Green, flashing continuously (device seated in	Fully charged
charging dock)	
Green, single flashing approx. every 3 seconds	Sample run in progress; accumulating data
Green, double flashing approx. every 3 seconds	Sample run paused
Amber flashing, alternating with green	Set % dose reached (level set in DataTrac dB
	Software)
White (lower right) flashing intermittently	Voice note present.
Blue (top), flashing intermittently	Communicating via BLE (with SKC SmartWave dB
(Cat. Nos. 701-001 and 701-001S only)	app)

Using the Buttons

See the table below for how to use the dosimeter buttons (*Figure 1*) to operate the device, navigate screens, and select screen prompts.


Button	Functions
Green	Turn on device. See Turning Power On/Off.
	Start run, pause run, and resume run.
	Select prompts YES, OK, SELECT, HOME, RESUME, LIST, and digit in PIN for Lock
	feature.
	Undim screen.
Red	• Turn off device (from Home, Setup, or Standby screens only). See Turning Power On/Off.
	Stop sample run.
	Select prompts NO, HOME, DELETE, and digit in PIN for Lock feature.
	Undim screen.
Previous/Next	From Home screen, Previous button scrolls to Info screen.
(left/right	Scroll backwards/forwards through virtual dosimeter screens
arrows)	Scroll up/down through History list.
	Select digits in PIN for Lock feature.
H (History)	View selected sample run history.
	Access History list.
	Return to Home screen after sample run has ended or from a sample run history.
V (Voice Note)	Record voice note during sample runs
	Access voice note recording held in memory to delete it.

Interpreting and Navigating Screen Displays

The screen displays are intuitive with messages and selection prompts to guide you through each operation. Icons at the top right and left corners indicate battery and operation status, activated features, and alerts (see Status Icons). **Note**: After approximately 30 seconds of inactivity, the screen will dim automatically. To undim, press the green button or red button.

Home Screen

When you turn on the noise dosimeter, the Home Setup screen (Home screen) appears (see below). From the Home screen, access device info, calibrate, scroll through virtual dosimeters, access History and Voice Note, and turn off the device.

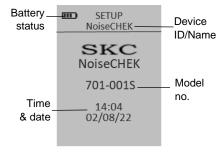

Info Screen

From the Home screen, press the Previous button to go to the Info screen, which displays the dosimeter model number, serial number (SN), last factory calibration (LFC) date, and firmware (FW) version (see right). **Note:** LFC won't be displayed on the dosimeters shipped before release of firmware v2.0.0 unless they were returned to SKC for annual calibration.



Virtual Dosimeter Screens (Setup and Standby)

Each programmed virtual dosimeter has a Setup screen with the following parameters set to the particular standard, e.g., OSHA HC or PEL, ACGIH, MSHA HC or PEL, or custom:

- Exchange (Exchange rate)
- Threshold
- Criterion (Criterion level)
- Response
- Freq weight (Frequency weight)

Octave bandwidth screens (Standby) are displayed if enabled in DataTrac dB Software. To view the parameter and bandwidth screens, use the Previous/Next buttons to scroll through the virtual dosimeter Setup and Standby screens. *Note:* For more



OSHA HC Measurement view screens

details on enabling octave bandwidths, see Using DataTrac dB Software.

History Screens

Press the History button (Figure 1) to access sample data. See Reviewing Data.

Status Icons

Icons	Indication
	Battery charge level (see Determining Battery Charge Status)
>	Sample running
П	Sample run paused
â	Lock feature activated
▶ ©	Overload: % Dose set in DataTrac dB Software reached during sample run

Changing Time/Date

Depending on model, you can change the time/date when moving between time zones in one or two ways:

- 1. **Cat. Nos. 701-001 and 701-001S only**: Connect to the dosimeter(s) via the SKC SmartWave dB mobile app. The time/date will automatically be adjusted to the time/date on your phone.
- 2. Use DataTrac dB Software to adjust the time/date and upload the setting from the PC to the dosimeter(s). See DataTrac dB Software for NoiseCHEK User Manual.

Recording/Playing a Voice Note

Record a voice note to identify details like the kind of noise being sampled, location of sampling, wearer's job description, and other relevant items. You can upload and play back a voice note on a PC using DataTrac dB Software. Only one voice note can be held in NoiseCHEK, and it must be deleted or uploaded to a PC before another note can be recorded.

Note: Voice Note can be disabled in DataTrac dB software. See DataTrac dB Software for NoiseCHEK User Manual.

- 1. From the Home screen, press and hold the Voice button to begin recording a note. *Note*: *Maximum recording time is approximately 44 seconds.*
- 2. End recording by pressing the Voice button again (otherwise it will be ended automatically when recording time exceeds maximum limit). See below.
 - a. **To save the recording**, select Home (press green button). The white LED will continue to flash intermittently (when dosimeter is powered on but not running) to indicate that a recording is present. If you try to record another note in the meantime, you will see the message that a recording is present. See Voice Note Status.



b. **To delete the recording**, select Delete (press red button). Select Yes (press green button) to confirm; the message that the recording has been deleted will appear. The white LED will stop flashing. See Voice Note Status.





Recording ended manually

Recording stopped automatically





Confirm deletion

Recording deleted

3. To play back a voice note, upload data to your PC via DataTrac dB Software. See DataTrac dB Software for NoiseCHEK User Manual.

Voice Note Status



Recording saved



Recording deleted

Attaching NoiseCHEK on a Worker

 
Attach the NoiseCHEK to the worker's shoulder **after** the unit has been turned on and calibrated and **before** the sample run is started.

- Choose the shoulder facing the highest level or source of noise.
 Place the unit on the top of that shoulder with the microphone as high
 as possible so it can collect maximum sound. Turn the wearer's head
 toward the dosimeter to make sure the chin does not touch the
 dosimeter.
- 2. Fasten the clothing clips securely to the shirt. See right.
- 3. During sampling, keep clothing from touching the windscreen to avoid contaminating results.



Removing/Reinstalling Windscreen

Remove windscreen: Hold the windscreen collar (with arrow on collar facing you), turn it to the unlock indicator on the dosimeter. Lift the windscreen from the microphone.







OPERATION

Performing a Sample Run

- Charge the battery completely before operating the noise dosimeter.
- Calibration is necessary before and after every sampling operation.
- AcoustiCHEK Class 2 Calibrator Cat. No. 703-002 is required for calibration.
- See Status Icons table for indicators that appear on screen during operation.

Calibrate

- 1. Turn on NoiseCHEK.
- 2. Remove the windscreen from the microphone. See Removing/Reinstalling the Windscreen.
- 3. Attach the AcoustiCHEK Class 2, 114-dB calibrator on the microphone, and turn on the calibrator by pressing the Power key.
- 4. Press the Level key to set calibrator to 114 dB (see calibrator operating instructions and Figure 3). After a 5-second countdown shown on the screen, calibration will take place.
- 5. When calibration is complete/passed, turn off or remove the calibrator from the microphone.
- 6. Select OK (press green button) on NoiseCHEK (returns you to Home screen).
- 7. Reinstall the windscreen. See Removing/Reinstalling the Windscreen.
- 8. You are ready to sample. See Sample.



Figure 3. Calibration Train and Display

Sample

- To schedule a timed sample run, see DataTrac dB Software for NoiseCHEK User Manual.
- For details about Secure Lock and Auto Lock, see Lock Feature.
- 1. After successful calibration, from the Home screen press the green button. See below. **Note**: Attach the dosimeter to the worker in Step 2 **before** selecting YES to begin sampling.
- 2. Attach NoiseCHEK on worker's shoulder. See Attaching Noise Dosimeter on a Worker.
- 3. Select YES (press green button) to begin sampling. The run indicator will appear at the top right of the screen (see below right).







Confirm start sampling.



Sample running

To pause sampling, press and hold green button. Select Yes (press green button) to confirm. The pause indicator appears at top right on the screen. See below. Note: If Auto Lock is enabled, you will be prompted to enter the four-digit PIN using the buttons on the dosimeter to select the PIN digits. See Lock Feature. NoiseCHEK will remain powered on but sampling will stop (timer will not increment further) and data will stop accumulating.



While sample is running, Confirm pause. press and hold green button.





Enter PIN if required.



Sample paused

b. **To resume sampling**, press and hold green button and confirm by selecting YES (press green button). See below. The timer will continue where it left off, and data will continue to accumulate.





Resume sampling.

Confirm resume sampling.

4. Stop sampling by pressing and holding the red button. Select YES (press green button) to confirm. *Note:* If Auto Lock is enabled, you will be prompted to enter the four-digit PIN. See Lock Feature.



Stop sample run.



Enter PIN if required.



Confirm stop.

- 5. Remove the device from the worker's shoulder. Review sample history or return to Home screen by pressing the red button or History button.
- 6. Proceed to Post-calibrate.

Post-calibrate

- Each time NoiseCHEK is calibrated, it displays the calibration values obtained "Before" and "After" calibration and stores them. For post-calibration, use the "Before" value.
- 1. See Calibrate, Steps 2 through 6.
- 2. Review data. See Reviewing Data (History).

Lock Feature

The Lock feature is activated in DataTrac dB software and enables connection to the mobile app for BLE models (Secure Lock) and lockout while the dosimeter is running (Auto Lock).

When this feature is activated, the lock icon appears in the upper right corner of the dosimeter screen.

Cat. Nos. 701-001 and 701-001S:

Secure Lock: A four-digit PIN (using numbers 1, 2, 3, 4) designated in DataTrac dB software is required to connect to the mobile app. Secure Lock must be activated to enable Auto Lock (see below). **Note**: Cat. Nos. 701-001 and 701-001S are shipped with Secure Lock activated and designated PIN 1234.

Auto Lock: When this is activated, the PIN designated for Secure Lock is required to **stop** or **pause** sampling but **not** to start the device.

Cat. Nos. 701-001NB and 701-001NBS:

Secure Lock is not available.

Auto Lock: When this is activated, a four-digit PIN (using numbers 1, 2, 3, 4) designated in DataTrac dB software is required to **stop or pause** sampling but **not** to start the device.

Reviewing Data (History)

The History (data) view (below left) appears after a sample run ends (after post-calibration) and when you press the History button from the Home screen.

- 1. View the run data.
 - a. Use Previous/Next buttons to scroll through and view the run data for each programmed virtual dosimeter. After viewing the last virtual dosimeter data, you will be prompted to go to the History list or to return to the Home screen (see below). Select LIST (press green button) to go to the History list.

OR

- b. From the History view of any virtual dosimeter, press the green button.
- 2. Scroll to the desired sample run and choose SELECT (press green button).



View sample run data.



Select list of sample runs.



Select run from list.

Review data in History on the NoiseCHEK device; on your PC using DataTrac dB software (see Using DataTrac dB Software); and, if using Cat. No. 701-001 or 701-001S, on your mobile device using the SKC SmartWave dB mobile app. **Note**: Use of the mobile app with intrinsically safe models may require an intrinsically safe mobile device.

Upload and print summary reports from PC or mobile app. Upload a more detailed report (compliance + time history) from your PC. **Note:** All the data needed to comply with OSHA is in the summary report.

Using DataTrac dB Software

NoiseCHEK communicates with a PC via SKC Charging Dock 701-002 or 701-003 and DataTrac dB Software (see *Install DataTrac dB Software*). With DataTrac dB software, you can:

- Program and modify presets in your dosimeter setup, including up to four virtual dosimeters, octave band display, secure lock (Cat. Nos. 701-001 and 701-001S only), auto lock, and more (see Setup in Figure 4).
- Schedule sample runs.
- Download data for viewing and generating and sharing summary and compliance reports.
- Share data with DataTrac dB on other PCs
- Listen to voice recordings
- Review notes

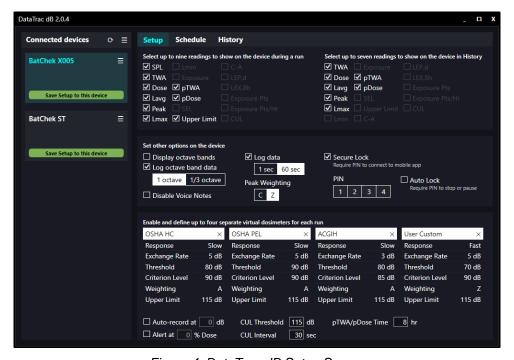


Figure 4. DataTrac dB Setup Screen

When all four virtual dosimeters and octave band data logging are enabled and log data is set to 1 second, it will take approximately 3 hours (1/3 octave) or 1 hour (1 octave) to download data accumulated during an 8-hour run. Select log octave band data and 1 second log interval only if you need and intend to use this kind of data.

Install DataTrac dB Software

The NoiseCHEK noise dosimeter communicates with a PC via USB cable and charging dock (1-unit or 5-unit) and DataTrac dB Software (*Figure 5*). Connect up to five NoiseCHEK dosimeters in the 5-unit charging dock to upload settings. **Note**: Do not apply stickers to the back of the dosimeter because this can cause connectivity issues while the dosimeter is in the charging dock.

- 1. Connect charging dock to PC using included USB cable.
- 2. Download from https://www.skcinc.com/catalog/datatrac/DataTracdB/setup.exe
 or copy from USB drive "setup.exe" and install DataTrac dB as instructed. DataTrac dB will launch automatically.
 - The DataTrac dB Installer requires administrator privileges to install properly.
- Place noise dosimeter(s) in the charging dock to complete the communication train (Figure 5). Note: DataTrac dB will only detect dosimeters that are properly seated in the connected charging dock.



Figure 5. Communication Train

To program and upload settings to your noise dosimeters and download run data to your PC, see the DataTrac dB Software for NoiseCHEK User Manual.

ACCESSORIES/REPLACEMENT PARTS

Accessories	Cat. No.
1-unit Charging Dock for charging and connection to PC, includes power supply100-240 V	701-002
5-unit Charging Dock for charging and connection to PC, includes power supply100-240 V	701-003
AcoustiCHEK Calibrator, Class 2 , for 1/2-inch microphones, includes AA batteries and Certificate of Manufacturer Calibration	703-002
Replacement Parts	Cat. No.
Replacement Parts Replacement Power Supply for Charging Docks, 12 V DC, with interchangeable plugs 100-240 V	Cat. No. 220-600
Replacement Power Supply for Charging Docks, 12 V DC, with	

SKC Limited Warranty and Return Policy

SKC products are subject to the SKC Limited Warranty and Return Policy, which provides SKC's sole liability and the buyer's exclusive remedy. To view the complete SKC Limited Warranty and Return Policy, go to skcinc.com/warranty.

APPENDIX: PERFORMANCE PROFILE

Standards	ANSI S1.25:1991
	• IEC 61252:2017
Microphone	½ in, Type 2, ACO7052
Noise Measurement Range	70 to 140 dB, peak up to 143 dB
Weighting	A, C, and Z; peak C or Z
Response Time	Fast and slow
Exchange Rate	3, 4, or 5 dB
Virtual Dosimeters	Up to 4, programmable, OSHA HC, OSHA PEL, MSHA HC, MSHA
	PEL, ACGIH, or custom
Octave Filters	1/1 or 1/3 octave bands
Run Time	40+ hours
Data Logging	Every 1 sec or 60 sec
Data Storage	40 to 4000+ hrs depending on configuration
Voice Note	Up to 44 sec, can be disabled
Audio Recording	Audio recording of event when sound pressure exceeds set value,
Addio Recording	can be disabled
Status LEDs	Green, amber, blue, and white LEDs provide visual indication of
Olalus LLDS	dosimeter status from a distance
Security	Cat. Nos. 701-001 and 701-001S only: User-selectable 4-digit PIN
Security	can be activated to secure access from mobile device
	All models: User-selectable 4-digit PNs can be activated to
	stop/pause the dosimeter
Connectivity	USB to PC with DataTrac dB Software
Connectivity	Cat. Nos. 701-001 and 701-001S only: BLE to mobile device with
	SKC SmartWave dB app (use of mobile app with intrinsically safe
	model may require an intrinsically safe mobile device)
Battery	Li-lon* polymer rechargeable battery, 3.7 V, 1200 mAh
Charge Time	6 to 8 hrs
Charging Method	Charging dock, 100-240 Vac, 12 Vdc, 5 V USB
Display	Continuously on, TFT monochrome, front lit 1.8 in (45.72 mm), 9
Display	lines of user-selectable data for each virtual dosimeter including:
	SPL, Lavg, Leq, Dose, Peak, TWA, projected dose and TWA, and
	exposure
Operating Temp. Range	32 to 122 F (0 to 50 C)
Humidity	Up to 95%, non-condensing
Dimensions	3.9 x 1.9 x 2 in (99 x 48 x 51 mm)
Weight	4.1 oz (117 gm)
RoHS	Compliant
Certifications/Markings for	Intrinsic Safety (SKC NoiseCHEK Models 701-001S and
Intrinsically Safe Models	701-001NBS)
Intrinsically Sale Models	Class I, Groups A, B, C, D; Class II, Groups E, F, G; Class III, T4;
	Class I, Zone 0, AEx ia IIC T4 Ga;
	Ex ia IIC T4 Ga; -20° C \leq T _a \leq 45°C
	⟨₺⟩ II 1G Ex ia IIC T4 Ga
	IECEx UL 21.0026
	DEMKO 21ATEX 2537 C(UL)us
	UL22UKEX2456 CF 0539
	UKCA 0843 E525020

^{*}NoiseCHEK dosimeters are shipped with Li-Ion batteries and are subject to special shipping regulations.