



SURFACE AND SKIN

ON-THE-SPOT CHEMICAL
SCREENING FOR AT-RISK AREAS

CHEMICAL EXPOSURE
INDICATORS

SWYPES



SWYPES

www.skcinc.com




Distributed by:
Air-Met Scientific Pty Ltd

Air-Met Sales/Service
P: 1800 000 744
F: 1800 000 774
E: sales@airmet.com.au

Air-Met Rental
P: 1300 137 067
E: hire@airmet.com.au
W: www.airmet.com.au

SURFACE SWYPE

- Suitable for OSHA PPE Standard
- Fast, easy results in 3 minutes
- Convenient and safe
 - Use on almost any surface
- Inexpensive – no instruments or analysis required
- Available for a variety of chemicals with ACGIH® skin notations
- Ideal for dermal exposure reduction programs

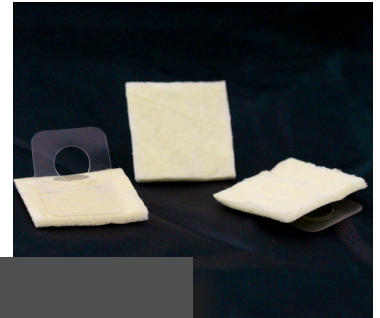


Determine surface contamination in **3 EASY STEPS!**



Spray surface, wait 30 seconds.



Wipe with SWYPE.

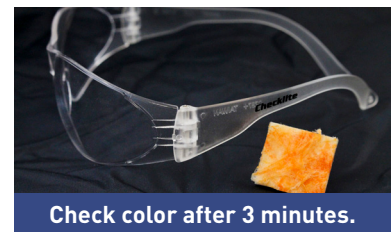

Check color after 3 minutes.

SKIN SWYPE

CLI by SKC Skin SWYPE indicators provide simple, fast, and visible proof of chemical exposure on skin that may have come into contact with contaminated surfaces. Skin SWYPEs identify work practices that may result in exposure, educate workers about prevention, and reinforce safe work practices. Use in conjunction with Surface SWYPE indicators to identify at-risk areas for housekeeping.


- Fast, easy, on-the-spot results
- Convenient and safe
- Designed for use on skin
- Inexpensive – no instruments or analysis required
- Available for a variety of chemicals with ACGIH skin notation
- Ideal for dermal exposure reduction programs



2 Easy **SKIN-SAFE STEPS**



Wipe skin with SWYPE.

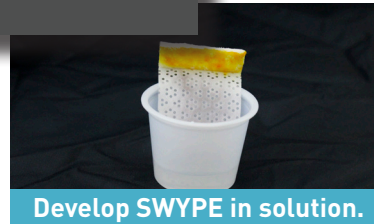

Develop SWYPE in solution.

FOR ORDERING AND DETAILS, VISIT WWW.SKCINC.COM