



# SURFACE AND SKIN

ON-THE-SPOT CHEMICAL  
SCREENING FOR AT-RISK AREAS

CHEMICAL EXPOSURE  
INDICATORS

# SWYPES



Distributed by  
**Air-Met Scientific**  
 ☎ 1800 000 744  
 ✉ sales@airmet.com.au  
 🌐 www.airmet.com.au



The Leader in Sampling Solutions and  
Expertise for OEHS Professionals


[www.skcinc.com](http://www.skcinc.com)



SCIENCE. SERVING PEOPLE.®

# SURFACE SWYPE

- Suitable for OSHA PPE Standard
- Fast, easy results
- Convenient and safe
  - Use on almost any surface
- Inexpensive – no instruments or analysis required
- Available for a variety of chemicals with ACGIH® skin notations
- Ideal for dermal exposure reduction programs

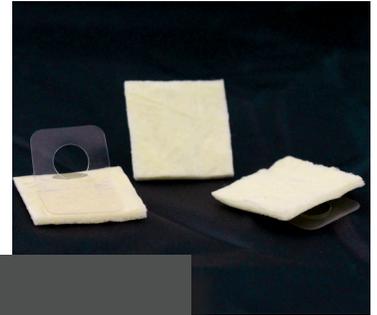

Determine surface contamination in **2 EASY STEPS!**



Spray surface and wipe with SWYPE.



Check color.

# SKIN SWYPE

CLI by SKC Skin SWYPE indicators provide simple, fast, and visible proof of chemical exposure on skin that may have come into contact with contaminated surfaces. Skin SWYPEs identify work practices that may result in exposure, educate workers about prevention, and reinforce safe work practices. Use in conjunction with Surface SWYPE indicators to identify at-risk areas for housekeeping.

- Fast, easy, on-the-spot results
- Convenient and safe
- Designed for use on skin
- Inexpensive – no instruments or analysis required
- Available for a variety of chemicals with ACGIH skin notation
- Ideal for dermal exposure reduction programs



2 Easy **SKIN-SAFE STEPS**



Wipe skin with SWYPE.



Develop SWYPE in solution.

FOR ORDERING AND DETAILS, VISIT [WWW.SKINC.COM/SURFACE-DERMAL](http://WWW.SKINC.COM/SURFACE-DERMAL)