

NEED HELP?
SCAN OR CLICK HERE
TO CONTACT US



Air-Met Scientific
www.airmet.com.au

TROLEX

DATA & CHARGING DOCK

QUICK START GUIDE

Register your warranty online
at www.trolex.com/register

P5650.1603_Rev B

XXD1⁺

1. CONNECT

Connect your **XKD1⁺** data dock to your local Mac or PC device via USB.



2. POWER

Using the supply power cable and transformer connect your data dock to a permanent power supply.



3. DOWNLOAD


Download the **BreatheLITE** software on to your PC or laptop.

 trolex.com/software



4. DOCK XCD1⁺

Place your **XCD1⁺** into the dock to begin charging.

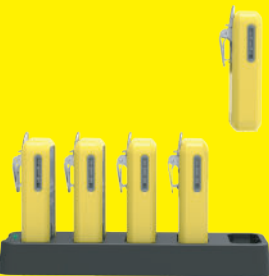

5. GRAB AND GO

Once the battery icon turns green, your **XCD1⁺** is charged and ready to use.




6. COLLECT DATA

Re-dock your **XCD1⁺** after each use to re-charge and **BreatheLITE** will automatically download your data.

7. REVIEW

Connect to **BreatheLITE** via USB to review, analyse and download device data.

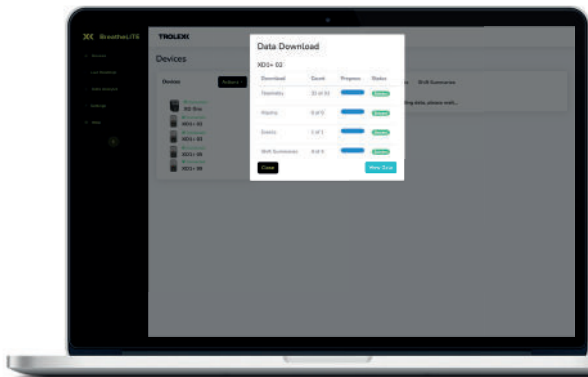



Contact sales@trolex.com
for more information