

**NEED HELP?**

SCAN OR CLICK HERE  
TO CONTACT US



**Air-Met Scientific**  
www.airmet.com.au




863 Valley View Road, Eighty Four, PA 15330  
724-941-9701  
skcinc.com

## Impinger Holders for AirChek TOUCH, Essential, and Connect Sample Pumps Cat. Nos. 225-20-03 and 225-20-04 Operating Instructions

Attach Double Glass Midget Impinger Holder Cat. No. 225-20-03 or Single PFA Impinger Holder Cat. No. 225-20-04 to your AirChek® TOUCH, Essential, or Connect pump as follows (*Cat. No. 225-20-03 holder is shown*):

1. Turn the holder on its side and insert the toggle on the back into the slot in the pump belt clip.

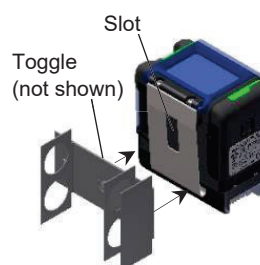

2. Rotate the holder 90 degrees so that the toggle catches securely inside either side of the slot and the bottom plate of the holder is parallel with the bottom of the pump.



### SKC Limited Warranty and Return Policy

SKC products are subject to the SKC Limited Warranty and Return Policy, which provides SKC's sole liability and the buyer's exclusive remedy. To view the complete SKC Limited Warranty and Return Policy, go to [skcinc.com/warranty](http://skcinc.com/warranty).