

MethChek

Sensitive Immunoassay Wipe Kits for ng-level Detection

- Semi-quantitative wipe kit
- Fast on-site reliable results
- Indicates meth residue ≥ 50 ng ($0.05 \mu\text{g}/100 \text{ cm}^2$)
 - Kits also available for indications at 100, 500, and 1500 ng
- Ideal for pre and post-remediation cleanup assessments and determining meth residue in multi-room housing
- Lightweight, portable kits
- Economical — multiple-test kit, no shipping, and no lab fees
- Developed by CDC-NIOSH
- Safe for use on many surfaces, including animal fur
- Detects presence of meth and provides indication of meth levels

**All-in-one
MethChek
Kits!**



Make informed decisions in the field! MethChek® Kits provide on-the-spot semi-quantitative assessment of meth residue at the lowest state cleanup guideline of $50 \text{ ng}/100 \text{ cm}^2$ (100, 500, and 1500 ng sensitivities also available). Simply wipe, extract, and read results. Combine MethChek with MethAlert (see reverse side) for easy pre-assessment and cleanup plan development. MethChek is an ideal post-assessment tool to determine the need for further cleaning before sending cleanup crews away.

Easy MethChek Ordering


Order the kit with the desired sensitivity.

Kits include gauze wipes/swabs, trays, templates, gloves, syringes (except MethChek 50), reagents, detection cartridges with disposable pipette, bags, instructions, and SDS.


MethChek Immunoassay Kits	Lower Limit of ID		Qty.	Cat. No.
	$\mu\text{g}/100 \text{ cm}^2$	ng		
MethChek 50	0.05	50	12 tests	560-004
			1 test	560-004A
			3 tests	560-004B
MethChek 100	0.1	100	12 tests	560-003
			1 test	560-003A
			3 tests	560-003B
MethChek 500	0.5	500	12 tests	560-002
			1 test	560-002A
			3 tests	560-002B
MethChek 1500	1.5	1500	12 tests	560-005
			1 test	560-005A
			3 tests	560-005B

Fast and Easy MethChek Wipe Test

1 Wipe

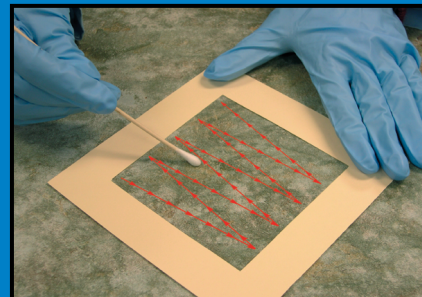

2 Extract

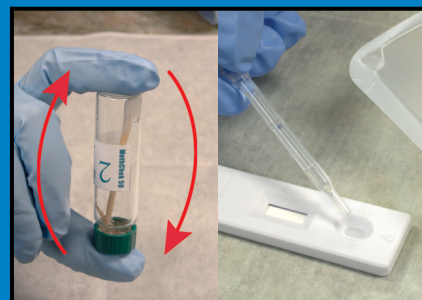

3 Read Results



Positive, meth detected above kit lower limit of ID



Negative, meth not detected at kit lower limit of ID



Invalid test, perform new test



SCIENCE. SERVING PEOPLE.

MA

MethAlert

Quickly Identify Meth Residue Hot Spots

- Colorimetric qualitative wipe kit
- Fast on-site reliable results
- Quick test for gross contamination at $\geq 15 \mu\text{g}$
- Easy — no training needed
- Economical — multiple-test kit
- Developed by CDC-NIOSH



MethAlert provides the fast answers you need to make field decisions on the spot. Quickly identify meth residue hot spots from 15 to 5000 $\mu\text{g}/100 \text{ cm}^2$ with the easy MethAlert colorimetric wipe test. Simply wet, wipe, spray, and observe for color change. MethAlert is ideal for use in multi-unit buildings, inside rooms near the meth cooking area, and as a quick check during remediation.

Easy MethAlert Ordering

The MethAlert Kit contains everything you need for 12 tests: gauze pads, trays, templates, gloves, reagents,* instructions, and SDS.

Description	Qty.	Cat. No.
MethAlert Kit*	12 tests	560-001

* Kits ship overnight. Reagents are cold-packed during shipping and must be kept in a refrigerator or a cooler when not in use. Avoid exposing reagents to temperatures above normal room temperature.

