





Panther Standard and PRO

Quick Start Guide

- 1 Fully charge Panther by using USB A to Type C cable.

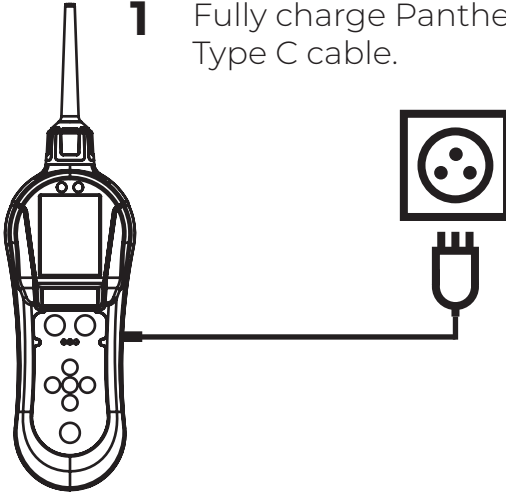

- 2 Press and hold the on/off button for 5 seconds to switch the instrument on/off.

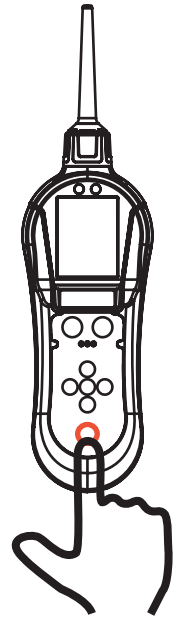


- 3 During the instruments 'start up', Panther will automatically zero.



Panther Standard and PRO

Quick Start Guide

- 4** If necessary, adjust your instrument's configuration directly from your device or via ION PC. For more information, please refer to the instrument manual.

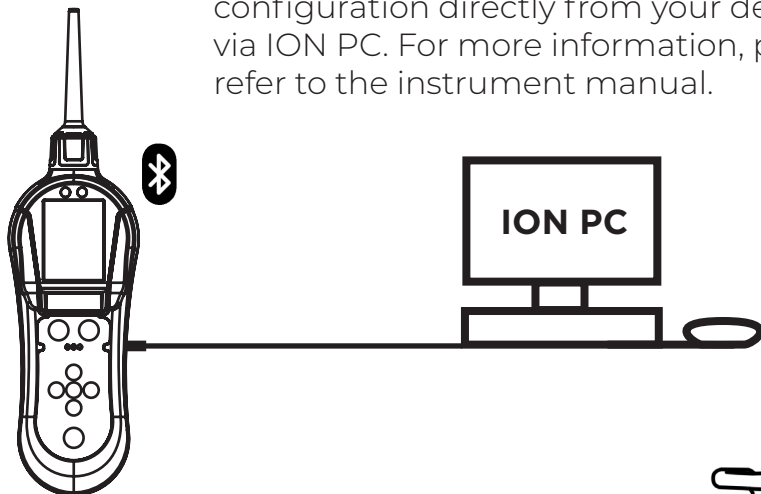

- 5** Bump test and calibrate Panther using a CalCheck (p/n A-21500) before use. The full calibration process can be found within the user manual.



Scan the QR code or visit www.ionscience.com to extend your instrument warranty to 2 years!

