

NEED HELP?



SCAN OR CLICK HERE  
TO CONTACT US



Air-Met Scientific  
[www.airmet.com.au](http://www.airmet.com.au)

# nardalert S3

## Personal Monitor

Operating Manual



**narda**   
Safety Test Solutions

**⚠ WARNING**

**Strong electromagnetic fields**

**High-level electromagnetic fields may be hazardous to your health. This monitor cannot protect you from all electromagnetic hazards that you could encounter.**

⇒ This Monitor should only be used after you have read this manual, understood how it operates and consulted with your company's safety officer.



Narda Safety Test Solutions GmbH  
Sandwiesenstrasse 7  
72793 Pfullingen, Germany

® Names and logo are registered trademarks of Narda Safety Test Solutions GmbH - Trade names are trademarks of the owners.

© 2022  
Order no.: 2270/98.21  
Published: 01/2022  
Earlier edition: 08/2019  
Subject to change.  
Our normal guarantee and delivery terms apply.  
Printed in Germany

---

# Contents

<b>1</b>	<b>Useful information .....</b>	<b>5</b>
1.1	Measuring electromagnetic fields.....	5
1.2	About this monitor .....	5
	Applications.....	6
1.3	About this Operating Manual .....	7
	Characters and symbols used .....	7
	Symbols and terms used in warnings .....	7
	Structure of warnings .....	7
	Symbols and marks used in this document .....	8
<b>2</b>	<b>Safety instructions.....</b>	<b>9</b>
2.1	Using this Operating Manual.....	9
2.2	Intended use.....	9
2.3	Dangers from electromagnetic fields .....	10
	Measurement errors.....	10
	Sensor is not installed or operating properly.....	11
2.4	Dangers from AC mains charger .....	11
<b>3</b>	<b>Preparing the Nardalert S3 for use.....</b>	<b>12</b>
3.1	Unpacking .....	12
	Packaging .....	12
	Items included.....	13
	Transport damage.....	14
	After transport and storage.....	14
3.2	Battery Installation.....	14
3.3	Instrument overview .....	15
	Top Panel .....	15
	Front Panel .....	15
	Rear Panel.....	15
	Side Panels.....	16
3.4	Connecting the sensor .....	17
	Wrong handling of the sensor .....	18
<b>4</b>	<b>Getting started .....</b>	<b>19</b>
4.1	Initial display screens .....	19
	Normal operation .....	20
	Alarm indication .....	20
4.2	Checking monitor functions.....	21
	Performing a function test: .....	21
	Appropriate test sources .....	21
4.3	Screen navigation .....	22

- 4.4 **Additional capabilities of optioned units.....23**
  - Menu selection screens.....23
  - Navigating sub-menu screen example .....24
- 5 Operation overview ..... 25**
  - 5.1 **Normal operation .....25**
  - 5.2 **Nardalert S3 default alarm levels .....26**
  - 5.3 **Special environmental operations .....26**
    - Heavy rain or snow .....26
    - High RF/microwave environments.....27
  - 5.4 **Using the Nardalert S3 as an area monitor .....27**
- 6 Cleaning, maintenance, repair ..... 28**
  - 6.1 **Cleaning.....28**
  - 6.2 **Performing calibration .....29**
  - 6.3 **Repair.....29**
  - 6.4 **Verification overview .....29**
    - Simplified block diagram .....29
    - Theory of operation .....30
    - Testing RF/microwave sensors .....30
    - Operational tests .....30
  - 6.5 **Disposal .....31**
    - Disposal of used equipment .....31
    - Disposal of removable batteries .....31
    - Disposal of permanently installed batteries .....31
    - Deleting private data .....31
- 7 Specifications ..... 33**
  - 7.1 **Monitor specifications .....34**
  - 7.2 **Sensor specifications .....35**
  - 7.3 **Outline drawing.....35**
  - 7.4 **Declaration of conformity.....36**
  - 7.5 **Declaration of origin .....36**
- 8 Ordering information ..... 37**
  - 8.1 **Nardalert S3 part numbers .....38**
  - 8.2 **Sensor part numbers .....38**
  - 8.3 **Optional accessories .....38**

---

# 1

## Useful information

This chapter contains basic information about measuring electromagnetic fields, about using the Nardalert S3, and about the structure of this Operating Manual.

[1.1 Measuring electromagnetic fields](#)

[1.2 About this monitor](#)

[1.3 About this Operating Manual](#)

### 1.1 Measuring electromagnetic fields

In today's world, many industries utilize equipment that generates electromagnetic fields. Our modern need for communications as well as the efficiency of electromagnetic heating systems and the safety that radar systems provide us are just a sample of the applications that are benefitted by exploitation of the electromagnetic spectrum. We also have various engineering considerations as well as regulatory requirements to use the electromagnetic spectrum wisely. Various authorities have long defined limit values designed to protect users from the dangers of exposure to such emissions, and the Nardalert S3 is an effective tool to help companies and individuals demonstrate compliance.

### 1.2 About this monitor

The Nardalert S3 ("NS3") provides virtually everyone concerned with this subject with an instrument for monitoring non-ionizing radiation that a body might be exposed to within the frequency range from 100 kHz to 100 GHz (depending on the sensor used). The NS3 has a wide range of functions, yet it is very easy to use. It also features a handy design, robust casing, long battery life, and high measurement accuracy.

The NS3 features multiple types of sensors to accurately monitor human exposures while worn on the body. It can be used off the body to detect fields also. Shaped sensors that evaluate the field according to a specific human safety standard are connected to the NS3 basic unit. These sensors are calibrated separately from the basic unit and include a non-volatile memory containing the sensor parameters and calibration data. They can therefore be used with any NS3 without any loss in calibration accuracy. The PC software supplied with the monitor allows you to configure and remote control the NS3, as well as to export saved measurement data and to analyze the results (if unit is configured for that option).

### **Applications**

The NS3 performs measurements for human safety purposes, particularly in workplace environments where high electric or magnetic field strengths are likely. It can also be configured to function as a stand-alone area monitor.

#### **Examples:**

- Monitoring human exposure field strengths as part of general safety regulations
- Monitoring the field strengths around transmitting and radar equipment to establish safety zones and for monitoring personnel during operations
- Monitoring the field strength emanating from mobile phone base stations and satellite communications systems to ensure compliance with human safety limit values
- Monitoring operator exposures in the industrial workplace environment, such as around plastic welding equipment, RF heating, tempering, or drying equipment
- Monitoring to ensure the safety of persons using diathermy equipment and other medical equipment that generates high frequency radiation
- Field strength monitoring in TEM cells, absorber chambers or test ranges


## 1.3 About this Operating Manual

### Characters and symbols used

Various elements are used in this Operating Manual to indicate special meanings or particularly important passages in the text.

### Symbols and terms used in warnings

According to the American National Standard ANSI Z535.6-2006, the following warnings, symbols, and terms are used in this document:





	The general danger symbol warns of risk of serious injury when used with the signal words <b>CAUTION</b> , <b>WARNING</b> , and <b>DANGER</b> . Follow all the instructions in order to avoid injuries or death.
<b>NOTICE</b>	Indicates a danger that results in damage to or destruction of the instrument.
<b>CAUTION</b>	Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
<b>WARNING</b>	Indicates a hazardous situation which, if not avoided, could result in death or serious injury.
<b>DANGER</b>	Indicates a hazardous situation which, if not avoided, will result in death or serious injury.

### Structure of warnings

All warnings are structured as follows:

<b>⚠ SIGNAL WORD</b>
<p><b>Type and source of danger</b></p> <p><b>Consequences of failure to observe warning</b></p> <p>⇒ Instructions for preventing danger</p>

## Symbols and marks used in this document

	<p><b>Important instruction</b></p> <p>Indicates an instruction that must be followed to avoid danger.</p>
	<p><b>Requirement</b></p> <p>Indicates a requirement that must be met before the next instruction can be carried out, e.g. ✓ The instrument is switched off.</p>
	<p><b>Instruction</b></p> <p>Indicates a single instruction, e.g. ⇒ Switch the instrument on.</p>
<ol style="list-style-type: none"> <li>1.</li> <li>2.</li> <li>3.</li> </ol>	<p><b>Sequence of instructions</b></p> <p>Indicates a sequence of instructions that must be carried out in the order given.</p>
	<p><b>Result</b></p> <p>Indicates the result of carrying out an instruction, e.g. ↵ The instrument starts a self test.</p>
<b>Bold Type</b>	<p><b>Control element</b></p> <p>Indicates a control element on the instrument, e.g. ⇒ Press the <b>Enter</b> key.</p>
CAPITALS	<p><b>Menu name</b></p> <p>Indicates a menu name, e.g. ⇒ Open the MAIN menu.</p>
Blue Type	<p><b>Cross reference</b> (in PDF document only)</p> <p>Indicates a cross reference to another part of the document. Click on the blue type in the PDF document to jump directly to the cross reference.</p>



---

# 2

## Safety instructions

This chapter contains important instructions on how to use the Nardalert S3 safely. Therefore, please read this chapter carefully and follow the instructions closely.

[2.1 Using this Operating Manual](#)

[2.2 Intended use](#)

[2.3 Dangers from electromagnetic fields](#)

[2.4 Dangers from AC mains charger](#)

### 2.1 Using this Operating Manual

- ! Carefully read this entire Operating Manual before you start using the instrument.
- ! Keep this Operating Manual so that it is available to everyone who uses the instrument, and ensure that this Operating Manual is with the instrument if you pass it on to a third party.

### 2.2 Intended use

- ! The NS3 is a warning device that gives active notice of the existence of dangerous fields by means of a visible and audible warning signal.
- ! Only use the instrument for the purpose and under the conditions for which it has been designed.

- ! In particular, observe the technical data given in the [Specifications](#) on pages 34-35. Proper use also includes:
  - ! Observing any national accident prevention regulations at the place of use.
  - ! Ensuring that the instrument is used only by appropriately qualified and trained persons.
- ! If you remove the unit from your body, it is important that the back of the unit faces your hand (body) especially at microwave frequencies. When you remove unit from body, carefully observe the actual field level displayed when you are approaching an unknown field source.

## 2.3 Dangers from electromagnetic fields

<b>⚠ WARNING</b>
<p><b>Strong electromagnetic fields</b></p> <p><b>Very strong electromagnetic fields occur near many radiation sources.</b></p> <ul style="list-style-type: none"><li>⇒ Observe safety barriers and markings.</li><li>⇒ In particular, persons with electronic implants must keep away from dangerous areas.</li><li>⇒ This monitor is designed to be directional at microwave frequencies. It cannot warn you about a microwave exposure behind you if the monitor is worn on the front of the body.</li></ul>

### Measurement errors

Metallic labels (stickers) affixed to the black sensor area of the sensor can lead to measurement errors, usually an underestimation of the electromagnetic field strength.

- ⇒ Affix labels of any type only to the yellow housing. Metallic labels must be affixed to the rear of the monitor.
- ⇒ If the instrument malfunctions, take it out of service and contact your Narda Sales Partner. The addresses are listed on the Internet at [www.narda-sts.com](http://www.narda-sts.com).

## Sensor is not installed or operating properly

The NS3 is designed to monitor the presence of the sensor and that the sensor is functional.

- ⇒ Ensure that the sensor is attached properly to the basic unit. Sensor is designed to be even with the surface of the basic unit and to pass a functional test at turn-on. If in doubt, cycle unit off and then on again to perform connection test. If the sensor is defective, not installed or failing pre-test, it will cause the system to not proceed to measurement mode.
- ⇒ Confidence testing of RF/microwave sensors can be accomplished with a simple 2-way radio that generates more than 1 Watt. An upscale indication should be noticed on the display when the radio is transmitting close to the sensor housing.
- ⇒ Before beginning any RF radiation measurement, always inform yourself of the frequencies and field strengths that you could be expected to encounter.

## 2.4 Dangers from AC mains charger

### **⚠ WARNING**

#### **Danger from mains voltage.**

**You could experience electric shock from the external power supply.**

- ⇒ Do not open the charger as there are no user serviceable parts inside.
- ⇒ Do not expose or submerge the charger in water at any time. It is designed to be used in an indoor, protected environment.
- ⇒ Only use appropriate USB adapter cords. Never use a damaged USB cord.
- ⇒ Only supply AC voltage that meets the voltage specified at the AC input on the Charger. The AC mains charger could be destroyed if the voltage specification of the charger does not match the AC line voltage.

---

# 3

## Preparing the Nardalert S3 for use

This chapter describes all you need to do before starting to use the Nardalert S3.

[3.1 Unpacking](#)

[3.2 Battery Installation](#)

[3.3 Instrument overview](#)

[3.4 Connecting the sensor](#)

### 3.1 Unpacking

#### Packaging

The packaging is designed to be re-used as long as it has not been damaged.

- ⇒ Keep the original packaging and use it whenever the instrument needs to be shipped or transported.

## Items included

⇒ Check that all the following items have been delivered:

- Carrying Case (2270/90.02)
- Nardalert S3 Mainframe (2270/01), battery included
- Silicon Sleeve (2270/90.03), attached to the mainframe
- Lanyard Clip, non-conductive (2270/90.04)
- Belt Clip, non-conductive (2270/90.05)
- Screwdriver Phillips 0 (2270/90.06)
- User's Guide and CD-ROM with Software NS3-TS (2270/90.07)
- Car Charger Adapter, USB 5V (2259/92.20)
- Cable, USB2.0 Master/Slave - A/B mini, 0.9m (2260/90.58)
- Power Supply, USB 5VDC, 100V-240VAC (2259/92.24, packed separately)
- Calibration Certificate, Mainframe
- Sensor Module with Calibration Certificate (2271/XX, packed separately)



## Transport damage

### Instrument/accessories damaged during transportation

Check for completeness and damages:

- ⇒ Remove device and accessories from the case and check for completeness as well as any transport damages.  
CAUTION! Do not operate a damaged device.
- ⇒ In the event of an incomplete delivery and damages to the device or accessories, please contact your Narda sales partner. You can find the Narda sales partner responsible for you on the Narda website at [www.narda-sts.com](http://www.narda-sts.com).

## After transport and storage

### Condensation on an instrument can lead to damage

Condensation can form on an instrument that has been stored at a low temperature when it is brought into a warm room. It may be damaged if used.

- ⇒ Wait until all visible condensation has evaporated from the instrument surface to avoid damaging the instrument.

**Note:** The instrument is not ready for use until it has reached a temperature within the operating range of -10 °C to +50 °C.

## 3.2 Battery Installation

The main operating battery (Narda P/N 2259/92.25) is a 3.6 Volt, lithium-ion rechargeable battery, Type RCR123A. The battery needs to be inserted into the NS3 before charging.

1. Unscrew battery door screw and insert battery with the positive (+) side towards the battery door. See picture below.
2. Hold battery door closed while tightening screw.
3. Charge unit with supplied AC or DC chargers and verify operation before attempting to use.

Insert battery with positive (+) side towards battery door




- ! Do not insert battery backwards. You could damage the battery door and/or the system will not charge.

### 3.3 Instrument overview


#### Top Panel




#### Front Panel

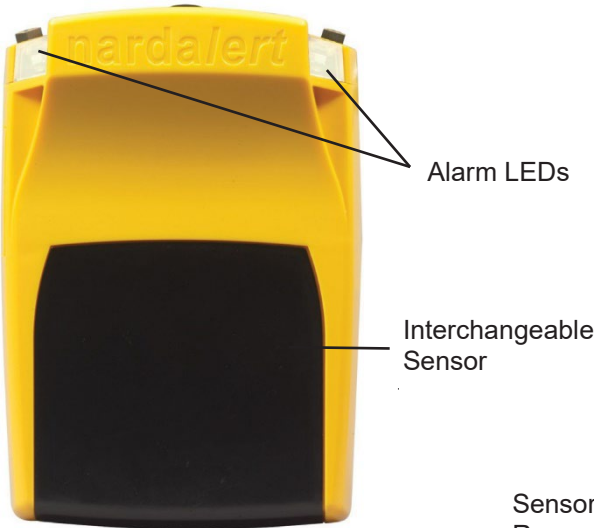

#### Rear Panel

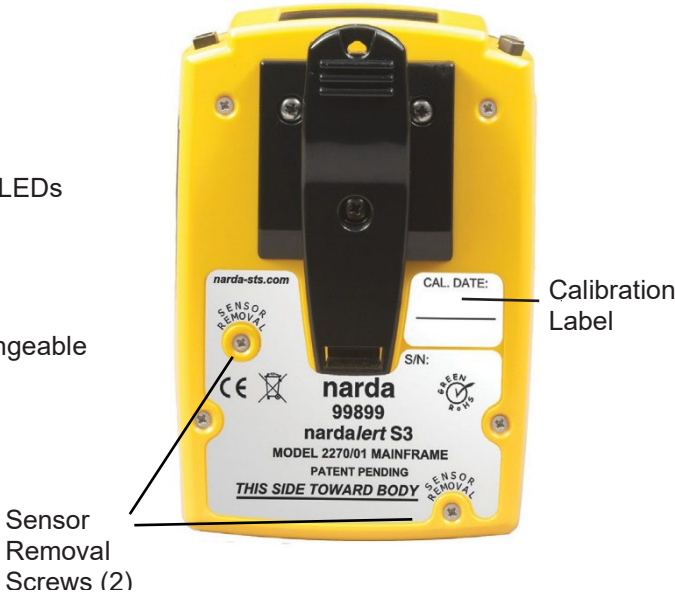

## Side Panels

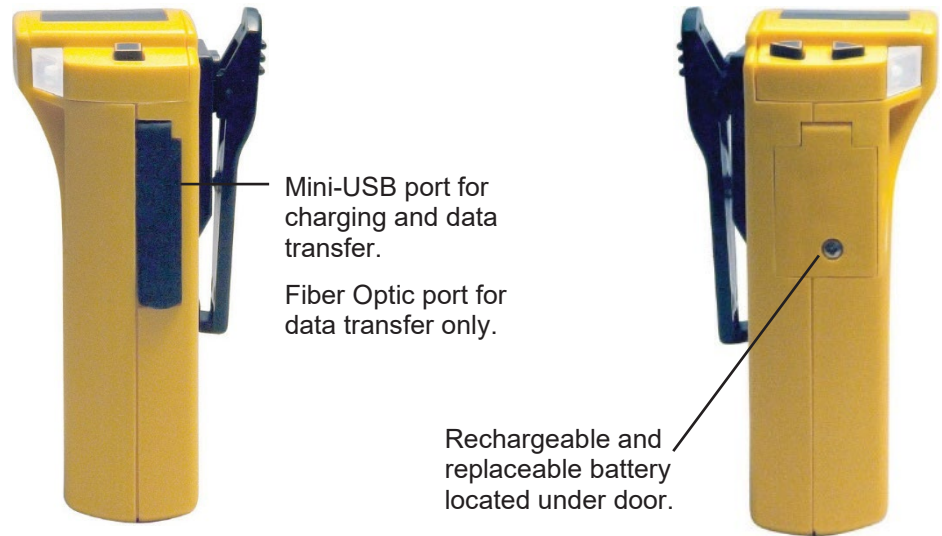



## 3.4 Connecting the sensor

### **⚠ WARNING**

#### **Strong electromagnetic fields**

**If the Sensor is not operating properly, or if the proper sensor is not chosen, you could be exposed to high field levels without your knowledge.**

- ⇒ Refer to [Sensor Specifications](#) on page 35 to select appropriate sensor(s).
- ⇒ Follow instructions below to properly connect sensor.

The NS3 is designed to monitor the presence of the sensor and that the sensor is functional. In order to simplify the turn-on procedure, it is recommended that the sensor be connected to the NS3 and the battery fully charged before beginning.

- ⇒ Ensure that the sensor is attached properly to the basic unit. The sensor is positioned so that it easily can be inserted and secured to the basic unit by tightening the two screws shown on page 15 ([Rear Panel](#)). Sensor is designed to be even with the surface of the basic unit and to pass a functional test at turn-on. If in doubt, cycle unit off and then on again to perform connection test. If the sensor is defective, not installed or failing pre-test, it will cause the system to not proceed to measurement mode.
- ⇒ Charging of the monitor is accomplished by attaching the proper AC mains plug to the charger and then the supplied USB cable to the charger and NS3. The unit will be rapidly charged when using the supplied USB charger and at a slower rate (longer time) if plugged into a computer. Charging time is approximately 4 hours for a full charge. Note the battery icon in the top right of the display when the unit is energized, indicating the amount of charge.
- ⇒ Confidence testing of RF/ microwave sensors can be accomplished with a simple 2-way radio that generates more than 1 Watt. An upscale indication should be noticed on the display when the radio is transmitting close to the sensor housing. The NS3 provides a menu screen "Self Test", to evaluate the output from the three detectors used in the RF/ microwave sensors.
- ⇒ Before beginning any RF radiation measurement, always try to verify the frequencies and field strengths that you could be expected to encounter.

There are different sensors available for different applications and use with the NS3. You can find more information about the order numbers and specifications of the sensors under [Ordering Information](#) on page 37, as well as in the data sheet of the NS3. These documents can also be downloaded from the Narda website on the internet at [www.narda-sts.com](http://www.narda-sts.com).

#### **Wrong handling of the sensor**

Damage of the sensor antennas

- ⇒ Always try to store the sensor in the carrying case when not installed in the NS3. This should help protect it from excessive shock and vibration, as well as environmental extremes.

---

# 4

## Getting started

This chapter describes how to switch on the Nardalert S3 and verify it is operating properly.

[4.1 Initial display screens](#)

[4.2 Checking monitor functions](#)

[4.3 Screen navigation](#)

[4.4 Additional capabilities of optioned units](#)

### 4.1 Initial display screens

The NS3 is switched on by depressing and holding the **On/Off** button on the left side of the display. The alarm LEDs will illuminate and the vibrator will activate before the splash screen (Figure 1) is displayed.



**Figure 1:** Splash Screen




**Figure 2:** Self Test Screen




**Figure 3:** Configuration Screen

The NS3 shows each screen for a few seconds as it performs a self test, verifies the monitor and sensor's information and date of calibration before beginning to measure and display detected fields.


- ⇒ If the sensor is defective or not attached to the basic unit, the start-up sequence will be stopped – screens in Figures 4 and 5 will not be displayed
- ⇒ If the calibration is more than 2 years old for the sensor, or 4 years old for the basic unit the calibration screen (Figure 4) will have a red background and one of the buttons needs to be depressed to continue.

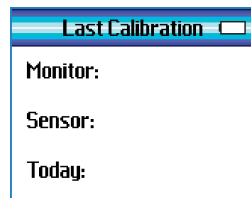

**Figure 4:** Calibration and Date Screen

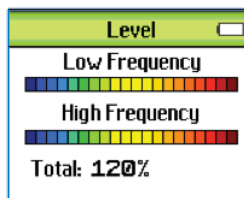

**Figure 5:** Normal Operation Display

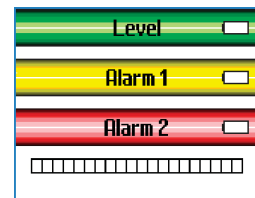

**Figure 6:** Alarm levels and color changes (not actual screen)

## Normal operation

The operation screen (Figure 5) displays the detected fields from the low and high frequency sensors separately to provide information to the wearer about the type of source creating the display. The display considers 1 GHz (approximately) as the separator between low and high frequencies.

## Alarm indication

If an alarm threshold is exceeded (Figure 6) the top color bar will change from Green to Yellow (Alarm 1) and from Yellow to Red (Alarm 2), if two alarms are used. If only one alarm is used, then the color bar will change from Green to Red (Alarm). The wearer also receives audible, vibrate and LED visual indications when alarm thresholds are exceeded (factory defaults).

## 4.2 Checking monitor functions

### Performing a function test:

1. Connect the sensor to the NS3. Turn monitor on, insure it completes its POST (Power On, Self Test) and then set menu to Self Test.
2. Use an appropriate check source to generate an upscale indication for that sensor's display on the NS3.
3. An upscale indication indicates an OK Function Test.
4. If no indication is seen on monitor display, verify that the unit passes its turn-on tests and verify the test source is operating properly.







**Note:** Do not use this function test for verifying calibration. This test is only suitable for checking sensors and their connection to the NS3. The readings displayed on the monitor depend on the type of sensor and are irrelevant for this test, and as such cannot be used to verify calibration.

### Appropriate test sources

A convenient method to test the RF/microwave sensors in the NS3 is to use a common two-way radio. In many countries "family radios" generate enough power to produce a full-scale reading if held very close to the sensor itself. The commonly used frequency of 433 MHz will produce an upscale indication for both the low and high frequency sensors, providing a more complete verification.

### 4.3 Screen navigation

Navigation is accomplished by using the **Up/Down** Arrows and the **Enter** Key. The NS3 responds to two types of key depression, “tap” or “hold”. “Tap” commands are completed by depressing the key for less than one second, while “hold” is for depressing the key for more than one second. Key use is further defined in the table below.

Key	Function – Before Menu Interface	Function – Menu Selection Screen	Function – Sub-Menu Screen
 <b>Enter</b> Tap	Light the backlight.	Performs the operation of the item that the arrow icon is pointing to.	<ol style="list-style-type: none"> <li>1. If the arrow icon is pointing to the parameter line and the selection process is not active, start the selection process.</li> <li>2. If the arrow icon is pointing to the parameter line and the selection process is active, accept the current parameter and place it in hold.</li> <li>3. If the arrow icon is pointing to the Cancel and Exit line, return to the Menu Selection Screen without implementing the change.</li> <li>4. If the arrow icon is pointing to the Save and Exit line, implement the parameter change, save the new parameter in memory and return to the Menu Selection Screen.</li> </ol>
 <b>Enter</b> Hold (>2 seconds)	Start power down process.	Start power down process.	Start power down process.
 <b>Up Arrow</b> Tap	Light the backlight	Move the arrow icon up to the previous item on the Menu Selection Screen. Scroll the text if necessary.	<ol style="list-style-type: none"> <li>1. If the selection process is active, scroll to the previous parameter choice.</li> <li>2. If the selection process is not active, move the arrow icon up to the previous item.</li> </ol>
 <b>Up Arrow</b> Hold (1 second)	Scroll to next screen if unit is not in a safety alarm state.		
 <b>Down Arrow</b> Tap	Light the backlight.	Move the arrow icon down to the next item on the Menu Selection Screen. Scroll the text if necessary.	<ol style="list-style-type: none"> <li>1. If the selection process is active, scroll to the next parameter choice.</li> <li>2. If the selection process is not active, move the arrow icon down to the next item.</li> </ol>
 <b>Down Arrow</b> Hold (1 second)	Scroll to previous screen if unit is not in a safety alarm state.		

## 4.4 Additional capabilities of optioned units

Your NS3 can be upgraded at any time to a full featured monitor that displays additional information as well as stores exposure data. This upgrade can be accomplished by entering a special code through the NS3-TS software and enabling the upgrade.

### Menu selection screens

Below are the various menu screens and their functions.



#### Alarm Indication

Allows for altering of the alarm indication between Audible and Vibrate, Audible only or Vibrate only. Factory default is Audible and Vibrate.

#### Alarm Threshold

Allows alarm threshold levels to be altered. Alarm 1 can be set from 10% to 100% and OFF. Alarm 2 can be set from 20% to 200%. Factory default is Alarm 1 at 50% and Alarm 2 at 200%.

#### Backlight

Allows setting of display backlight times to OFF, 5 seconds, 10 seconds, 30 seconds, 1 minute and Permanent ON. Factory default is 10 seconds. Longer backlight times result in lower operating time.

#### Data Log

Sets data logging rate from 4 per second, 1 per second, 5 seconds, 20 seconds or 1 minute. Factory default is 1 sample per second.

#### Factory Defaults

Resets all monitor functions back to Factory Default values.

#### F/O Interface

Sets fiber optic interface for communication or remote vibrator operation. Factory default is the communication setting.

#### History

Displays maximum, minimum and average readings for the last 6 minutes.

#### Last Calibration

Displays last calibration dates for sensor and monitor.












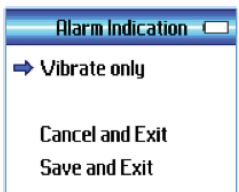






### Model Information

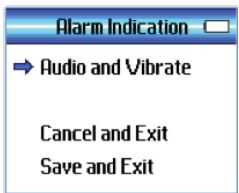Displays information about the monitor and firmware version as well as sensor information.
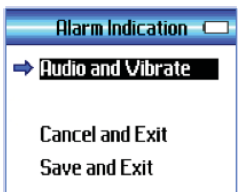
### Sensor Test

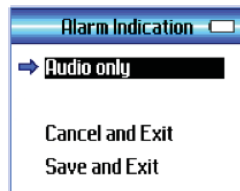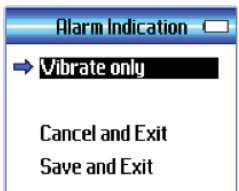Displays individual sensor output for user to self-test system for proper function.
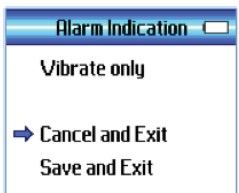
### Navigating sub-menu screen example
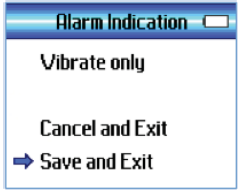
<p>1. Tap the  Button when arrow is pointing at <b>Alarm Indication</b>.   NS3 display changes to:</p>		
<p>2. Tap the  key again to select item to be modified.   Item is highlighted to confirm selection.</p>		
<p>3. Tap either the  or  arrow to cycle through choices.</p>		
<p>4. Tap the  again to select choice. Choice is not confirmed until you “Save and Exit.”</p>		
<p>5. Tap the  arrow once to get to the “Cancel and Exit” selection. Tap  to leave the function without implementing the parameter change.</p>		
<p>6. To implement the change and to store it in memory so the next time the unit is powered up it will recall the setting, move the arrow icon to the “Save and Exit” line (by tapping  twice). Tap the  key to return to the menu selection screen.</p>		



---

# 5

## Operation overview

[5.1 Normal operation](#)

[5.2 Nardalert S3 default alarm levels](#)

[5.3 Special environmental operations](#)

[5.4 Using the Nardalert S3 as an area monitor](#)

### 5.1 Normal operation

The NS3 should be fully charged and configured for your personal use. The factory provides both a lanyard attachment and a belt clip for your convenience, and a silicon skin to help provide protection for the unit against shock.

Once you have verified the proper mounting configuration and have charged the unit you should verify that the alarm levels shown on the second start-up screen meet with your company's policy. The NS3 was designed to be mounted with the reverse side towards your body. Some customers prefer to wear the unit mounted to a waist belt while others prefer a lanyard attachment. Either method of attachment is acceptable as long as the unit is normally kept close to the body to improve the radial field sensor's performance.

The default setting for the LCD backlight is to extinguish after 10 seconds, in order to save battery life. You can depress any button to activate the LCD backlight, but the display should be visible in direct sunlight without the backlight. An LED will briefly flash every 10 seconds to indicate the unit is operating properly.

The NS3 samples the sensor's output approximately every 32 msec., and uses the average of 8 samples to log at its fastest rate. The display is updated every second, so the level displayed is an average of the four logs. The monitor can be set to log at a rate as fast as 4 times per second for high speed situations.

Alarms are indicated by the screen, LEDs, audible and vibrate alarms. In an Alarm 1 situation the tone and vibrator alternate at an approximate 1 second rate. Red and Amber LEDs will also illuminate on one side of the display. Exceeding the Alarm 2 threshold will cause the audible alarm to step through 5 tones while the vibrate rate is doubled from the Alarm 1 rate. Red and Amber LEDs on both sides of the display will illuminate alternately. If customers choose to employ only one alarm, it will indicate Alarm 2 characteristics.

The battery icon is always displayed on the unit. When the battery displays a “Red” background there is less than 20% life left and the unit should be charged immediately. If the battery level falls below 10%, audible and LED alarms will be generated without vibration or LCD backlight.

### 5.2 Nardalert S3 default alarm levels

The NS3 is supplied from the factory with Alarm 1 set at 50% and Alarm 2 set at 200% of RF/microwave Exposure limits for Occupational or Controlled limits. Standards and guidance’s normally recommend conservative exposure limits that are both time and spatially averaged and relate to a 100% reading on the NS3. However, the NS3 cannot typically perform time and spatial averaging when being used as a wearable monitor. Therefore, Narda has historically recommended that a 50% alarm be used to warn the wearer of the presence of strong fields and a 200% reading to warn the wearer to leave the area. While it might be possible that a 200% reading is still compliant with standards once readings are time and spatially averaged, it is beyond the capability of the NS3 to determine that in normal use.

### 5.3 Special environmental operations



#### Heavy rain or snow

The NS3 was designed to be water resistant. It is recommended to employ the optional Weatherproof Pouch, P/N 2270/92.01 as a minimum measure to keep water from accumulating within the unit. It is NOT recommended to wear the monitor inside of clothing as wet garments can seriously attenuate microwave field levels the unit may need to detect.

Extreme low temperatures will cause the LCD to respond slowly and for the battery life to be degraded, however the unit will continue to function to -20 °C.

### **High RF/microwave environments**

The NS3 has not, at the time of this writing, developed a high power sensor for use with RF clothing. Persons wearing RF clothing should not use this monitor under the clothing. Currents flowing through the clothing could cause the monitor to false alarm.

## **5.4 Using the Nardalert S3 as an area monitor**

The NS3 functions as an effective, stand-alone area monitoring device. It may be operated continuously from the USB supply while employing the Fiber Optic interface for communicating field level information back to a computer. In Section [8.3 Optional Accessories](#) there are part numbers given for fiber optic cables as well as the F.O. to USB adapter that would be required in order to provide area monitoring operation.

---

# 6

## Cleaning, maintenance, repair

[6.1 Cleaning](#)

[6.2 Performing calibration](#)

[6.3 Repair](#)

[6.4 Verification overview](#)

[6.5 Disposal](#)

### 6.1 Cleaning

#### **NOTICE**

##### **Unsuitable cleaning methods**

**Solvents can damage the Nardalert S3 or the charger. Water can damage the charger.**

- ⇒ Do not use solvents to clean the Nardalert S3 and charger. As cleaning fluid, we recommend the use of lukewarm water to which a drop of liquid detergent has been added.
- ⇒ To clean the charger, use only a slightly damp cloth. Never allow water to enter the charger.
- ⇒ If necessary, wipe down the still-damp device parts with a dry cloth.

## 6.2 Performing calibration

Narda recommends recalibrating the Nardalert S3 mainframe 2270/01 after 4 years latest and the sensor modules 2271/XX after 2 years. For new devices, this recommendation applies from the date of commissioning by the customer. Depending on the conditions in which the device is used, you may independently decide to define other calibration intervals.

⇒ For calibration, send the device to your Narda sales partner. You can find the Narda sales partner responsible for you on the Narda website at [www.narda-sts.com](http://www.narda-sts.com).

**!** *All NS3 mainframes need to be returned to their local calibration facility at least once every 4 years for replacement of their internal clock battery. There are no operator accessible controls or written procedures available to perform this critical step. If batteries are not changed they may pose a safety hazard as well as damaging the NS3 itself.*


## 6.3 Repair

Repairs may only be performed by qualified specialists.

⇒ For more information, please contact your Narda sales partner or visit [www.narda-sts.com](http://www.narda-sts.com).

## 6.4 Verification overview

### Simplified block diagram

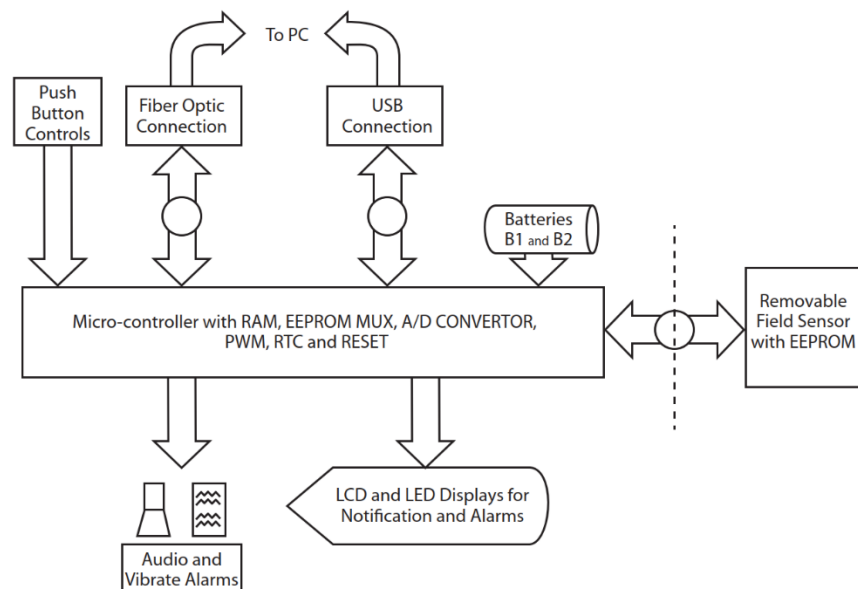

## Theory of operation

The NS3's patented design can be supplied with RF/microwave sensors (2271/XX) that detect the electric field over an extremely broad frequency range regardless of signal type or polarization.

- The low frequency detector is a low-impedance, surface-area type designed to detect the radial fields that are characteristic of low frequency communications systems. The diode based detection operates in its "square-law" region to yield accurate results even in complex, multi-signal environments.
- A diode-dipole antenna is added to complement the low frequency sensor in the UHF region and to optimize detection of any and all polarizations.
- Higher microwave frequencies (>2 GHz) are primarily detected with thermocouple arrays. This detector is a true "square-law" sensor that will always yield RMS average results, even in a pulse-modulated exposure environment.
- Individual outputs from all three detectors are processed by the NS3 with their calibration information supplied by the sensor's imbedded EEPROM. All units are individually calibrated to facilitate field support.

The NS3's design utilizes RF shielding and absorbers to isolate it from reflections or scattering produced by the monitor, or the human body. In general, the monitor cannot detect microwave fields from behind the body when it is worn on the front of the body. At low frequencies (<100 MHz), however, the body can act as an antenna and introduce energy into the monitor, even when the source is from behind the wearer.

The sensors field response is by design:

**0.1 to 10 MHz** = Radial Only

**10 to 1600 MHz** = Radial and Vertical

**1.6 to 100 GHz** = Vertical and Horizontal

## Testing RF/microwave sensors

The NS3 includes a menu screen (Sensor Test) that allows users to generate their own signal to see the monitor respond. Note that your signal's power and frequency need to be sufficient to register a response on the monitor. Users may find that a common "family radio" operating at 433 MHz and at least 2 Watts of power can be used as a simple, but effective test source.

## Operational tests

Units should be visually inspected for complete and correct battery conditions, switches and overall mechanical integrity. Units should pass the "Turn-on" sequence and indicate full or nearly full battery condition.

After successful completion of operational testing, units should be connected to a computer through the Fiber Optic port, to verify

communication capability.

**!** *All NS3 mainframes need to be returned to their local calibration facility at least once every 4 years for replacement of their internal clock battery. There are no operator accessible controls or written procedures available to perform this critical step. If batteries are not changed they may pose a safety hazard as well as damaging the NS3 itself.*

## 6.5 Disposal



### Disposal of used equipment

The crossed-out wheeled garbage can symbol indicates that this product is subject to the European WEEE Directive 2012/19/EU on the disposal of waste electrical and electronic equipment and must be disposed of separately from household waste in accordance with your national regulations.

In the European Union, all electronic measuring systems purchased from Narda after August 13, 2005 can be returned at the end of their useful life.

⇒ For more information, contact your Narda distributor.

### Disposal of removable batteries

⇒ Batteries must not be disposed of in household waste, but must be disposed of separately from the product in accordance with the applicable regulations. They can be returned free of charge to the appropriate collection points, your dealer or directly via Narda.

⇒ Please discharge the batteries before disposal.

### Disposal of permanently installed batteries

Your instrument has permanently installed Li-metal primary batteries, which cannot be removed non-destructively by the user.

Non-destructive removal is only possible by Narda itself or by qualified personnel.

⇒ Instructions for non-destructive removal of the batteries can be found on the Narda website [www.narda-sts.com](http://www.narda-sts.com) under the corresponding product page.

### Deleting private data

⇒ Make sure that you delete any stored private data before passing on or disposing of the device.

**⚠ CAUTION**

**Your Nardalert S3 contains a Lithium ion battery pack.**

**There is a risk of fire and burns if the battery pack is handled improperly.**

- ⇒ Do not disassemble, crush, puncture, short external contacts, or dispose of in fire or water.
- ⇒ Do not attempt to open or service the battery pack.
- ⇒ Replace only with the battery pack designated for this product.



---

# 7

## Specifications

[7.1 Monitor specifications](#)

[7.2 Sensor specifications](#)

[7.3 Outline drawing](#)

[7.4 Declaration of conformity](#)

[7.5 Declaration of origin](#)

All specifications are subject to change without prior notice.

The technical specifications may change due to product developments. The latest technical specifications can be found in the datasheet of the product.

The datasheet can be downloaded from the Narda website [www.narda-sts.com](http://www.narda-sts.com) under the corresponding product page.

## 7.1 Monitor specifications

<b>Display</b>	
<b>Type</b>	TFT color LCD, transmissive
<b>Size</b>	1.77 inches, 28 x 35 mm, 128 x 160 pixels
<b>Backlight</b>	White LEDs
<b>Refresh Rate</b>	250 msec.
<b>NS3 Option Key</b>	Allows access to stored data from NS3-TS and/or LCD screen. Additional items made available include Alarm Mode, Alarm Set, Backlight, Data Log, Fiber Optic Interface, and History
<b>Memory <sup>a</sup></b>	
<b>Size</b>	62,000 events
<b>Storage Rate</b>	4 per second, 1 per 1, 5, 10, 20 or 60 seconds
<b>Storage Time</b>	Variable - from 4.3 hours (4/ 1 s) to 43 days (1/ 60 s)
<b>Remote Operation</b>	
<b>Interface</b>	USB or Optical RS-232
<b>USB</b>	Serial, Full Duplex, 57600 baud, USB 2.0 mini B jack
<b>Optical</b>	Serial, Full Duplex, 57600 baud, connector type RP-02
<b>Recommended Calibration Interval</b>	4 Years for Mainframe (P/N 2270/01)
<b>Battery Type/ Approximate Life</b>	RCR123A, Li-Ion (rechargeable via USB port) 25 hours
<b>Temperature Range</b>	
<b>Operating</b>	-10 °C to +50 °C (14 °F to 122 °F)
<b>Non-operating</b>	30 °C to +70 °C (-22 °F to 158 °F)
<b>Humidity</b>	5% to 95%, non-condensing (≤ 29 g/m <sup>3</sup> , IEC 60721-3-2 class 7K2)
<b>Dimensions (H x W x D)</b>	117 mm x 83 mm x 32 mm ( 4.6 in x 3.25 in x 1.25 in), mainframe with sensor
<b>Weight</b>	230 g (0.5 lb), mainframe with sensor
<b>Accessories (included)</b>	Carrying Case, AC Charger with Plugs, Car Charger Adapter, Charger/Data cable (USB 2.0), Belt Clip, Lanyard Clip, Screwdriver, Manual, NS3-TS Software, Calibration Certificate

**Notes:**

**a** Memory function only available to "Optioned" units.


## 7.2 Sensor specifications

Sensor Module	IEEE	FCC	SC6	ICNIRP
Frequency Range	3 MHz to 100 GHz	100 kHz to 100 GHz		
Field Measured	Electric Field, $V^2/m^2$			
Sensor Design	Radial Field, Diode-Dipole and Thermocouple Array			
Alarm Accuracy	+4.5 / -3.0 dB (100 kHz to 30 GHz) +2.5 / -6.0 dB (30 to 50 GHz) +2.5 / -6.0 dB (50 to 100 GHz, Typical)			
Monitor Range <sup>a</sup>	5% to 200% of Standard or Guidance			
Immunity at 50/60 Hz	100 kV/m			
CW Overload	3000% of Standard or Guidance			
Peak Overload	32 dB above Standard or Guidance			
Recommended Calibration Interval	2 Years for Sensors (P/N 2271/XX)			

**Notes:**

<sup>a</sup> Percentages related to the highest power density allowed by Standard or Guidance (Controlled, Occupational).

## 7.3 Outline drawing

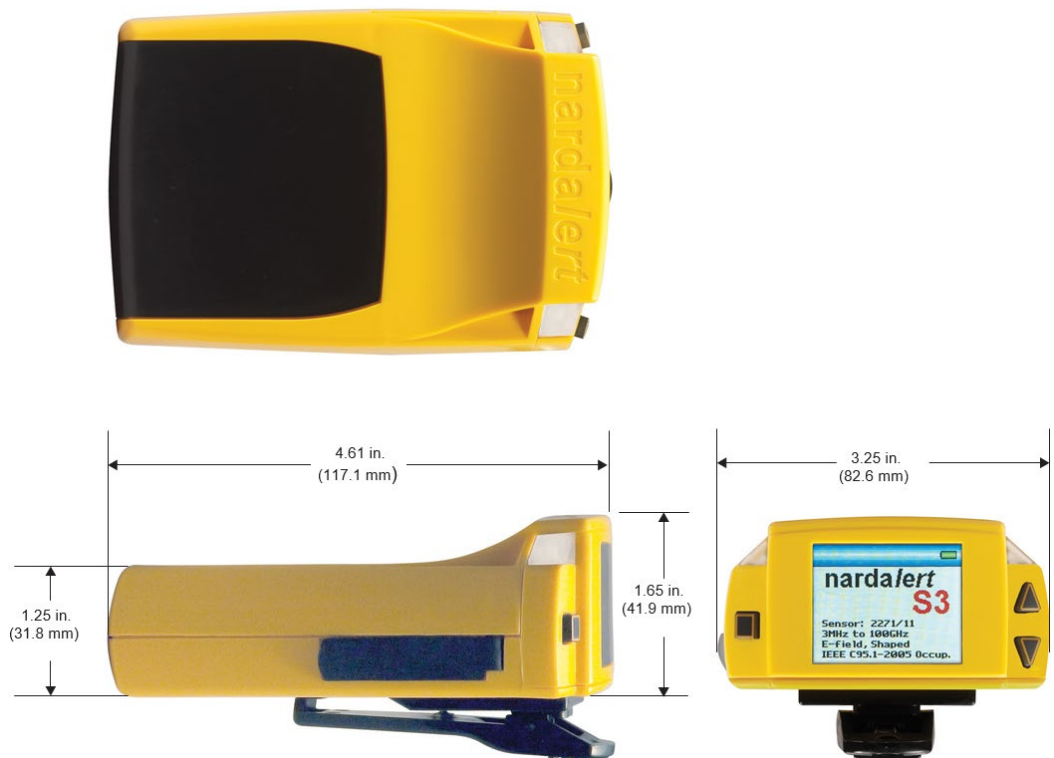

## 7.4 Declaration of conformity

Hereby, Narda STS declares that this equipment is in compliance with the directives 2014/30/EU, EN 61326-1:2013, 2014/35/EU, EN 61010-1:2010, and 2011/65/EU.

The full text of the EU declaration of conformity is available at [www.narda-sts.com](http://www.narda-sts.com).

## 7.5 Declaration of origin

Country of origin	Germany
-------------------	---------



---

# 8

## Ordering information

This chapter contains the information needed for ordering the NS3, together with its sensors and accessories.

[8.1 Nardalert S3 part numbers](#)

[8.2 Sensor part numbers](#)

[8.3 Optional accessories](#)

## 8.1 Nardalert S3 part numbers

<b>NARDALERT S3 MONITOR SET INCLUDES:</b>	
Nardalert S3 Mainframe (2270/01), battery included	
Carrying Case (2270/90.02)	
Silicon Sleeve (2270/90.03), attached to the mainframe	
Lanyard Clip, non-conductive (2270/90.04)	
Belt Clip, non-conductive (2270/90.05)	
Screwdriver Phillips 0 (2270/90.06)	
User's Guide and CD-ROM with Software NS3-TS (2270/90.07)	
Car Charger Adapter, USB 5V (2259/92.20)	
Power Supply, USB 5VDC, 100V-240VAC (2259/92.24)	
Cable, USB2.0 Master/Slave - A/B mini, 0.9m (2260/90.58)	
Calibration Certificate	
<b>AND YOUR CHOICE of SENSOR MODULE:</b>	
with <b>FCC</b> Sensor Module	2271/101
with <b>IEEE</b> Sensor Module	2271/112
with <b>SC6</b> Sensor Module	2271/122
with <b>ICNIRP</b> Sensor Module	2271/131
Option Key, Nardalert S3	2270/90.01

## 8.2 Sensor part numbers

Sensor Module, FCC 1997 "Occupational/ Controlled"	2271/01
Sensor Module, IEEE C95.1-2019, "Controlled"	2271/12
Sensor Module, Safety Code 6-2015, "Controlled"	2271/22
Sensor Module, ICNIRP 1998, "Occupational" (compliant with ICNIRP 2020 for frequencies above 30 MHz)	2271/31

## 8.3 Optional accessories

Nardalert Weatherproof Pouch	2270/92.01
Cable, FO Duplex, RP-02, 2m	2260/91.02
Cable, FO Duplex, RP-02, 10m	2260/91.07
Cable, FO Duplex, RP-02, 20m	2260/91.03
Cable, FO Duplex, RP-02, 50m	2260/91.04
Cable, FO Duplex, F-SMA to RP-02, 0.3m	2260/91.01
O/E Converter RS232, RP-02/DB9	2260/90.06
O/E Converter USB, RP-02/USB	2260/90.07
Cable, Adapter, USB2.0 - RS232, 0.8m	2260/90.53





**Narda Safety Test Solutions GmbH**

Sandwiesenstrasse 7  
72793 Pfullingen, Germany  
Phone +49 7121 97 32 0  
info@narda-sts.com

**Narda Safety Test Solutions**

North America Representative Office  
435 Moreland Road  
Hauppauge, NY11788, USA  
Phone +1 631 231 1700  
info@narda-sts.com

**Narda Safety Test Solutions S.r.l.**

Via Rimini, 22  
20142 Milano, Italy  
Phone +39 0258188 1  
nardait.support@narda-sts.it

**Narda Safety Test Solutions GmbH**

Beijing Representative Office  
Xiyuan Hotel, No. 1 Sanlihe Road, Haidian  
100044 Beijing, China  
Phone +86 10 6830 5870  
support@narda-sts.cn

[www.narda-sts.com](http://www.narda-sts.com)